


Measure a Stair Going and Rise

Highlighting a few common pitfalls and errors to avoid

General Notes

- ✓ It is best practise to measure each and every tread, especially on older staircases.
- ✓ Take care to measure nose to nose if there is a tread overhang.
- ✓ Also measure the overall going and rise as a double check.
- ✓ Clearly state if you have included or excluded the top landing in your dimensions.
- ✓ If installing the balustrading ON TOP of the floor covering then check before dimensioning that the final floor covering is installed. Contractors installing floor coverings to a different dimension to what was originally agreed is one of the most common causes of errors!
- ✓ If installing below the floor covering clearly indicate what this is with dimensions etc.

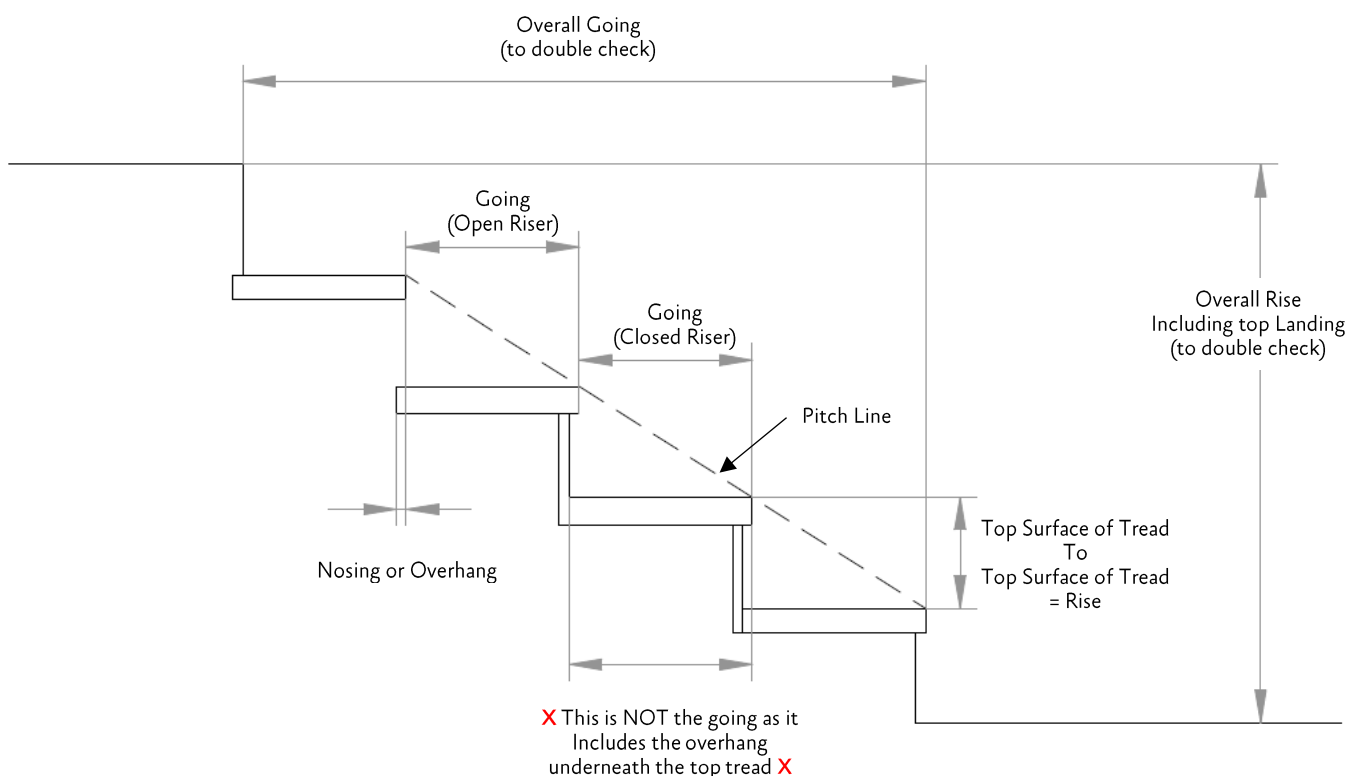

Note:
Technical information, dimensions and illustrations in this guide are for guidance purposes only. We reserve the right to change product sizes and details without prior notice. We always recommend that the purchaser checks the sizes of the actual batch purchased prior to drilling other materials.

All advice or assistance relating to our products is given in good faith but without obligation and subject specifically to the exclusion of any liability whatever on our part or on the part of our staff for damages whether direct or consequential. It is the buyer's responsibility to establish the suitability of the product and materials for the purpose for which they are purchased.